
# SEAVIEW// ELEVATE YOUR ELECTRONICS

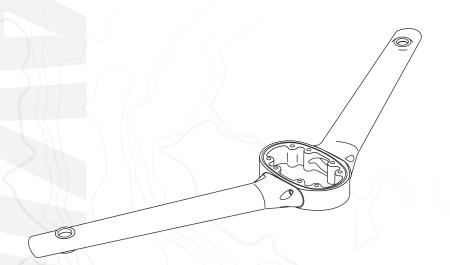

## INSTALLATION INSTRUCTIONS


For Seaview Spreader Kits:

SP1-MOD, SP2-MOD

Refer to website for most up to date instructions and videos.

WWW.SEAVIEWGLOBAL.COM

#### PARTS INCLUDED

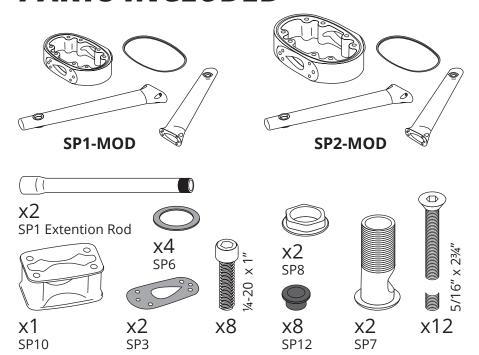


#### **TOOLS NEEDED**




Sudbury Elastomeric Marine Sealant is recommended. To purchase call 800-655-7922 or visit www.seaviewglobal.com

Apply the rubber grommet onto the threaded adapter and then insert through the spreader.


Apply another rubber grommet and plastic nut on the threaded adapter.

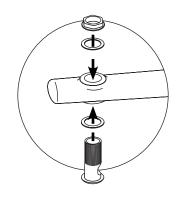


If you are using a satellite dome the plastic extension rod is not needed. Apply marine adhesive sealant to the threads of the adapter and screw on the GPS unit. Route the cables through the spreader.

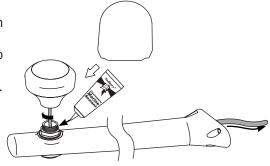


If you are using a closed dome radar use the provided plastic extion rods. Apply marine adhesive sealant to the threads of the adapter and screw on the GPS unit. Route the cables through the spreader.

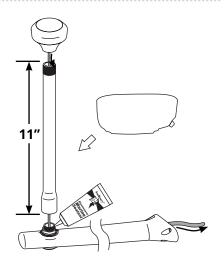


If your fiberglass antenna is less then 4' tall then you are ok.

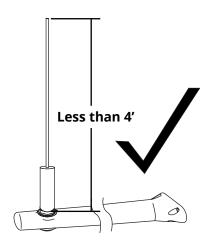

Do <u>NOT</u> use 4' or taller fiberglass antennas with Seaview Spreader Kits. Please call 800-523-7558.

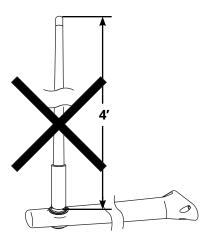


Place the rubber gaskets onto the sides of the center spreader body. Make sure that the six mounting holes line up.

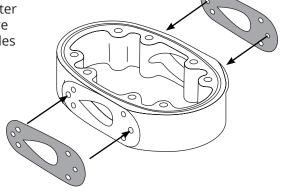




Route the cables through the center spreader body.

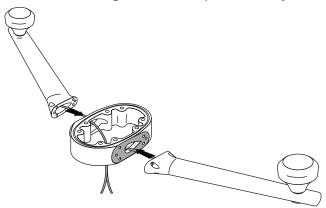



Insert the eight black plastic shoulder washers into the spreader bolt holes.


Using the eight 1/4-20 x 1" bolts tighten the spreaders with an allen wrench.

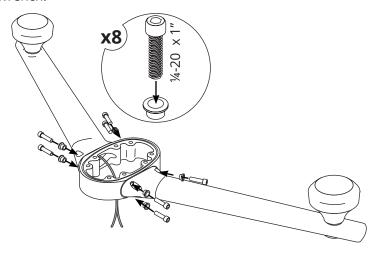

9

Place the rubber gasket in the groove on the top of the Seaview mount.


Then place the Spreader Kit on top of the mount assembly.

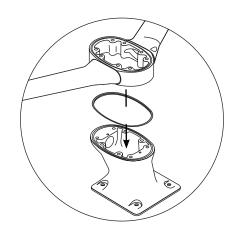


10

Place the rubber gasket that comes with the Seaview Top Plate Kit into the groove on the top of the Spreader Kit center body.

Bolt the assembly together using the eight  $5/16 \times 234$ " bolts.

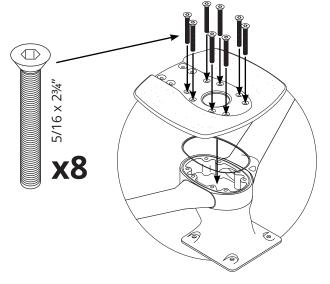


If you are using an optional Seaview
Lightbar wrap the rubber bushing around the end of the lightbar.

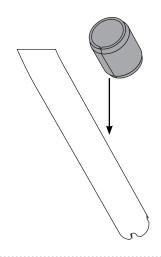



Place the white plastic adapter piece ontop of the rubber bushing.

Place the stainless steel bracket onto the bottom of the rubber bushing.

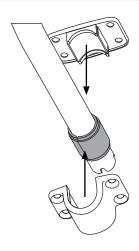


Place the white plastic spacer ontop of the adapter.

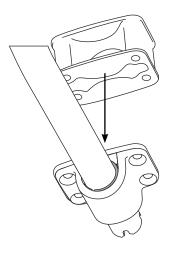

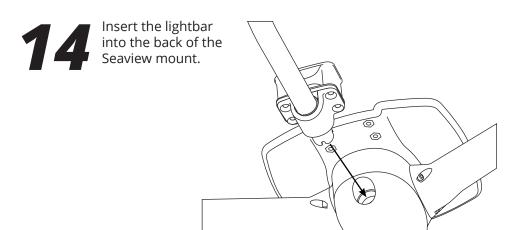


Bolt the assembly together with four  $5/16 \times 23/4$ " bolts.

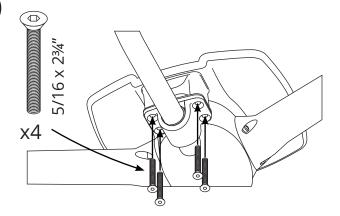


#### **OPTIONAL ACCESSORIES**

Call 800-655-7922 or visit www.seaviewglobal.com for available accessories.
 
#### SP7SS




Stainless steel threaded fitting for Tapered Mast Spreaders.

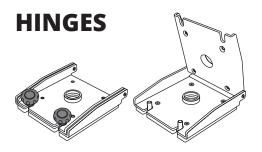


Seaview Hinge Adapters fold in any direction necessary for added height clearance.

### SPREADER FLOOD LIGHT KIT

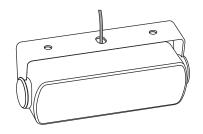


**SP-LT-LED** Flood Light Kit for Tapered Mast spreaders.

#### **WEDGES**

 

Compensates for plane angle. Available in 2, 4 or 6 degree wedges.

#### **CABLE GLANDS**

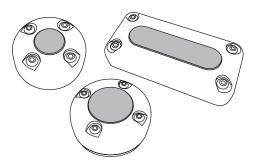


Seaview Cable Glands provide waterproof cable routing.


#### **OPTIONAL ACCESSORIES**

Call 800-655-7922 or visit www.seaviewglobal.com for available accessories.
 
#### **LIGHT BARS**




**LTB-R** Fits closed dome radars.

 


**LTB-S** Fits 20" or smaller satdomes.

#### **LIGHT BAR TOPS**

 

 **LTBP-1197**Perko 1197
Incandescent
Light.



**LTBA-7800** Attwood LED Light.



**LTBU1A1197**Light Bar Top
with Perko 1197
Incandescent
Light, can fit GPS.



**LTBU1A800**Light Bar Top with Attwood LED Light, can fit GPS.

#### THIS PAGE INTENTIONALLY LEFT BLANK.



**SEAVIEW**//

Tel: 800-655-7922 www.seaviewglobal.com

**EUROPEAN OFFICE** 

Tel: +33 4 94 53 27 70 www.seaviewprogress.com