
SEAVIEW!

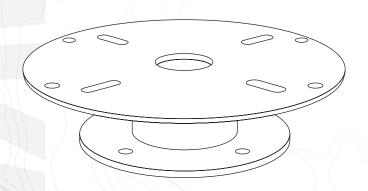

INSTALLATION INSTRUCTIONS


For Low Profile Satdome Adapter:

AMA-GXF

Refer to website for most up to date instructions and videos.

WWW.SEAVIEWGLOBAL.COM


PARTS INCLUDED

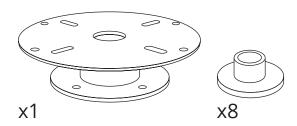


TOOLS NEEDED




Sudbury Elastomeric Marine Sealant is recommended. To purchase call 800-655-7922 or visit www.seaviewglobal.com




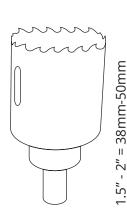




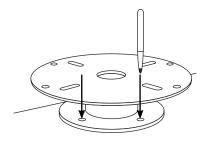


Using a 5/16" (8mm) drill bit, drill the four base bolt holes and center cable hole.

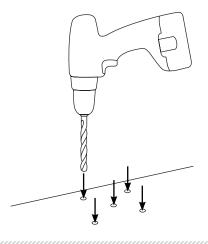

Use a 1½" to 2" (38mm to 50mm) hole saw for the center cable hole.

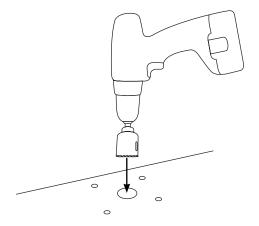


Apply marine adhesive sealant to the base of the mount. Be sure to go around the base holes.

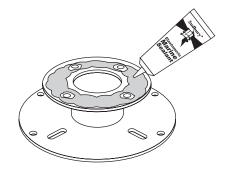


5

Align the four mounting holes.

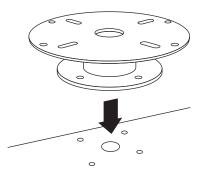


6


Using your own bolts and the provided nylon shoulder washers secure the mount. Apply marine adhesive sealant to the threads.

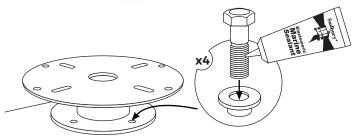


7

Route cables through the AMAGXF.

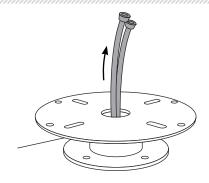




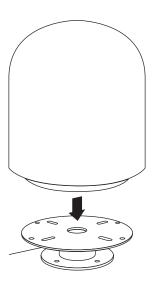

9


Using your own bolts and the provided nylon shoulder washers secure the satellite dome to the mount. Apply marine adhesive sealant to the threads of the bolts.

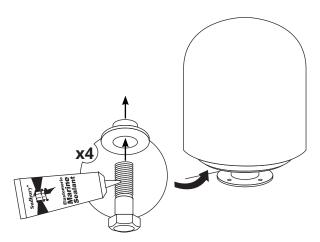

OPTIONAL ACCESSORIES

Call 800-655-7922 or visit www.seaviewglobal.com for available accessories.

WEDGE

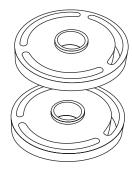

AMA-W

Fits all Low Profile Satdome Adapters. Allows for 0 - 12 degrees of adjustement.

THIS PAGE INTENTIONALLY LEFT BLANK.



SEAVIEW//

Tel: 800-655-7922 www.seaviewglobal.com

EUROPEAN OFFICE

Tel: +33 4 94 53 27 70 www.seaviewprogress.com